


51088HOM UM


70mm x 83mm



DO NOT RETURN THE PRODUCT

There are good days and there are bad days. It is our BAD if the product is not working, or if you are not happy with it. PLEASE GIVE US A CHANCE and WE WILL MAKE IT RIGHT.

1-833-3-Fosmon (833-336-7666)
(612) 435-7508
support@fosmon.com



130dB Wireless Window/Door Alarm Sensors with Remote Control


User Manual

For complete user manual and troubleshooting guide, please visit www.fosmon.com/user-manuals

 
Battery Installation

- 1- Slide cover down to remove battery door.
- 2- Install 2x AAA batteries.
- 3- Reinstall battery door.


Low power warning: When alarm battery is lower than 2.1V, it will emit a continuous beep sound. Please replace the battery as soon as possible.



Slide down the cover




Install 2pcs AAA battery

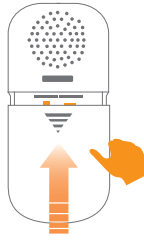 


Slide up the cover

Mounting Instructions


- 1 – Apply 3M tape on to the back of alarm and magnet.
- 2 – Ready 3M tape by peeling off cover.
- 3 – Mount alarm and magnet on to window or door with arrows markers facing each other (roughly <15mm apart).



 Put 3M tape on the back

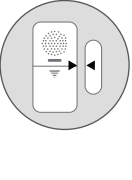

Stick it on the door
two parts distance within 15mm



 
beep

Remote Layout

Light Indicator

Lock button
Enables Alarm

Function button
Toggles Between Ding-Dong, Alarm, and Beep



Unlock button
Disables Alarm

SOS button
Triggers SOS alarm

 
Pairing Additional Remote

Note: alarm and remote already come paired out of box

Speaker

Volume Buttons

LED Indicator



- 1 – Press and hold the Volume Up (+) button for 5 seconds.
- 2 – When the LED stays solid red, press any button on the desired remote to pair it.
- 3 – If pairing is successful, a short beep should be heard.

Removing Paired Remotes

- 1 – To remove paired remotes, press and hold the Volume Down (-) button for 8 seconds.
- 2 – The LED will flash while the button is held.
- 3 – When the LED turns off, the remotes will be successfully un-paired.






Specifications

Environment Humidity	<90%
Working Temperature	14~ 140°F (-10~60°C)
Decibel	130db
Alarm Battery Requirement	2x AAA
Alarm Standby Time	1 year
Remote Battery Requirement	1x CR2032
Remote Standby Time	1 year

Package Includes

- 1x Alarm
- 1x Remote (with CR2032 battery)
- 2x AAA Battery
- 2x Adhesive mounting tape
- 1x Quick Start Guide

Follow Us On Social Media



www.fosmon.com
support@fosmon.com
© 2021 Fosmon Inc. All rights reserved.

Recycling the Product

To dispose this product properly, please follow the recycling process regulated in your area.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Lifetime Warranty

This Fosmon product includes a limited lifetime warranty. Please visit our Fosmon website for more details.