

Dual Conductive Charging Station for Xbox Series S/X Controllers



Thank you for purchasing this Fosmon product. For optimum performance and safety, please read this user manual carefully before operating and keep it for future reference.

This Fosmon Dual Conductive Charging Station for Xbox Series S/X Controllers with 2 rechargeable 1000mAh battery packs is the perfect addition to your gaming accessories. Easily charge and play with your Xbox Series S/X controllers.

Specifications

Input: USB-C

Output: Conductive Charging Contacts **Battery Information:** 1000mAh NiMH Rechargeable

Charging Time: 4-5 hours

Battery Life: Up to 33 hours of playtime

Led Charging Indicators: ... Red for charging, Green for charged

Charging Cycles: Over 1000

Package Includes

2x 1000mAh NiMH Rechargeable Battery Packs 1x Fosmon Dual Conductive Charging Station 1x USB-C Charging Cable 1x User Manual



DO NOT RETURN THE PRODUCT

There are good days and there are bad days. It is our BAD if the product is not working, or if you are not happy with it. PLEASE GIVE US A CHANCE and WE WILL MAKE IT RIGHT.

1-833-3-Fosmon (833-336-7666) (612) 435-7508 support@fosmon.com

Product Diagram and Installation



- 1. Place battery in battery compartment, with tabs lined up in their correct slots.
- 2. Push battery into locked position

Charging Guide

- 1. Connect provided USB-C to USB-A cable into a power source using the USB-A side (Xbox or Power Adapter), then connect the cable into the charging dock's USB-C input.
- 2. Carefully place the controller on the charging dock, making sure to line up the batteries charging contacts with the docks charging pins.
- 3. The front LEDs on the dock will show charging status. Red means the battery is charging, green means the battery is fully charged.

Caution

- Cables must be placed well, where it would not be stepped on or pinched. Make sure cables are fully inserted into ports.
- Do not set up this product adjacent to a water source or an environment that has excessive moisture.
- Do not operate when hands are wet.
- Do not attempt to dismantle the product on your own.
- Do not throw or drop the product or subject it to strong physical shock.
- Do not use or store the product in a humid environment or a high temperature environment.
- Keep this product out of reach of children.

Follow Us On Social Media

Limited Lifetime Warranty



www.fosmon.com support@fosmon.com © 2021 Fosmon Inc. All rights reserved. Visit formon.com/warranty for Product Registration, warranty and limited liability details.

Recycling the Product

To dispose this product properly, please follow the recycling process regulated in your area.