



C-10777 PKG

120mm x 90mm



Fosmon Dual Slot Battery Charger



PLEASE DO NOT RETURN THIS PRODUCT

There are good days and bad days. If there is a problem with your product or you are unhappy with it, PLEASE GIVE US A CHANCE TO MAKE IT RIGHT.

Email: support@fosmon.com
US Toll Free: 1-833-3-FOSMON (833-336-7666)
Local / International: 1-612-435-7508

Thank you for purchasing this Fosmon product. For optimum performance and safety, please read this user manual carefully before operating and keep it for future reference.

This Fosmon Dual Slot Battery Charger is the perfect addition to your gaming accessories. Easily charge and play with your Xbox Series S/X and Xbox One S/X controllers.

Package Includes

2x 2200mAh NiMH Rechargeable Battery Packs
1x Fosmon Dual Slot Battery Charger
1x USB-C Charging Cable
1x User Manual


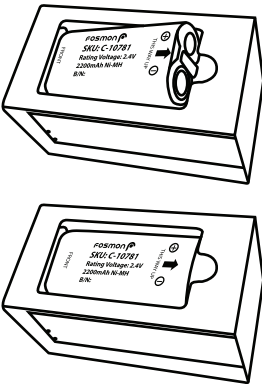
Specifications

Input	USB-C / Conductive Charging Contacts
Battery Information	2200mAh NiMH Rechargeable
Charge Time	4.5 – 5 Hours
Battery Life	Up to 45 hours of playtime
Led Charging Indicators	Red while charging, Green when fully charged
Charging Cycles	Over 500

Product Diagram and Installation

1.Place battery in battery compartment, with tabs lined up in their correct slots starting from the left side when viewing the controller from the back.

2. Push battery into locked position by pressing the right side of the battery into position.



Disclaimer: The C-10777 charger and C-10781 battery pack must be used in conjunction with each other. Failure to do so might damage the products and void warranty.

Charging Guide

1. Connect provided USB-C to USB-A cable into a power source using the USB-A side (Xbox or Power Adapter), then connect the cable into the charger's USB-C input.
2. The charge indicator lights will flash solid red, then solid green before turning off and a green LED should illuminate the top, indicating that the charger is powered up and ready to charge your batteries.
3. Place the battery pack into the charging slot, making sure to insert the bottom first before locking in the top. Make sure the front is facing out and that you follow the "THIS WAY UP" instruction for proper installation.
4. When your batteries are fully charged, the small indicator LED at the bottom should be solid green.
5. Remove the battery by using the small tab on top of the battery to pry it out.

Caution

- Cables must be placed well, where it would not be stopped on or pinched. Make sure cables are fully inserted into ports.
- Do not set up this product adjacent to a water source or an environment that has excessive moisture.




Limited Lifetime Warranty

Visit fosmon.com/warranty for Product Registration, warranty and limited liability details.

Recycling the Product

To dispose this product properly, please follow the recycling process regulated in your area.

Follow Us On Social Media



www.fosmon.com
support@fosmon.com
© 2021 Fosmon Inc. All rights reserved.
All trade names are registered trademarks of respective manufacturers listed.