C-10798FAUS User Manual Size 85 mm (H) x 40 mm (L) Folded



Fosmon [ETL Listed] 125V/15A
24-Hour Front Facing
Mechanical Outlet Timer
with One US Socket Outlet White

with One US Socket Outlet – White User Manual



PLEASE DO NOT RETURN THIS PRODUCT

There are good days and bad days. If there is a problem with your product or you are unhappy with it.

PLEASE GIVE US A CHANCE TO MAKE IT RIGHT.

Email: support@fosmon.com US Toll Free: 1-833-3-FOSMON (833-336-7666) Local/International: (612) 435-7508 Thank you for purchasing this Fosmon product. For optimum performance and safety, please read this user manual carefully before operating and keep it for future reference.

Fosmon's 24-hour mechanical timer conveniently turns your indoor light on and off automatically. The resettable dial allows you to customize your schedule up to 24-hours at 30-minute increments.

 
Package Includes

- 1x 24-Hour Mechanical Outlet Timer for C-10798FAUS
- 2x 24-Hour Mechanical Outlet Timer for C-10799FBUS
- 1x User Manual

Specifications

Voltage	125VAC 60Hz
Maximum Load	15A 1875W Resistive / General Purpose 10A 1250W Tungsten 34 HP, TV-5
30 Minutes Interval For Indoor Use Only	

Product Diagram



Instructions

For the operation video, please visit https://www.youtube.com/@FosmonTech and search "C-10798FAUS".

1. Program On and Off Schedule

- There are 48 push buttons around the dial. Each push button is for a period of 30 minutes.
- When a push button is pressed down, the appliance plugged into the timer will be on during that period of time.
- When a push button is lifted up, the appliance plugged into the timer will be off during that period of time.

NOTE:

- If the push buttons are flush with the dial, they are in the up position.
 Otherwise, they are in the down position.
- 2. When the Current Time Pointer is pointing to a push button, the push button is not able to be pressed down. Turn the dial clockwise, and move the push button away from the pointer. Then you will be able to press the push button down.

2. Set Current Time

- Turn the dial clockwise one full revolution, and then advance it until the arrow points to the current time.
- The dark area denotes night time, and the white area denotes daytime.

3. Activate Timer

- After completing step 1 and 2, slide the switch to the (TIMER ON) position to activate the timer.
- Plug the timer to a wall outlet, and then plug an appliance to the timer.
 Turn on the appliance to complete setup.

4. Deactivate Timer

Limited Lifetime Warranty

Visit fosmon.com/warranty for Product Registration, warranty and limited liability details.

Recycling the Product

To dispose this product properly, please follow the recycling process regulated in your area.

Follow Us On Social Media



www.fosmon.com support@fosmon.com © 2023 Fosmon Inc. All rights reserved.