

# C-10749 User Manual

## Size 85 mm (H) x 40 mm (L)

### Folded



#### DO NOT RETURN THE PRODUCT

There are good days and there are bad days.  
It is our BAD if the product is not working,  
or if you are not happy with it.

PLEASE GIVE US A CHANCE and  
WE WILL MAKE IT RIGHT

Contact us:  
Toll Free: (833)-3-Fosmon (+1-833-336-7666)  
Direct: (612)-435-7508  
Email: support@fosmon.com



#### Fosmon 24-Hour Timer with 1 On/Off Program Setting

User Manual  
Go to [fosmon.com](http://fosmon.com) for video instructions

Thank you for purchasing this Fosmon product. For optimum performance and safety, please read this user manual carefully before operating and keep it for future reference.

Fosmon's Indoor Digital Timer will allow you to schedule one on/off program and the program will repeat every day. The timer will save your money and energy by always turning on/off your lamps, electrical appliances, or decoration lighting on time.


#### Package Includes

- 2x 24-Hr Programmable Timer
- 1x User Manual

#### Specifications

Power	125VAC 60Hz
Max. Load	15A General Purpose or Resistive 10A Tungsten, 1/2HR, TV-5
Min. Setting Time	1 Minute
Operating Temperature	-10°C to +40°C
Accuracy	+/-1 Minute Per Month
Battery Backup	NIMH 1.2V > 100 Hours

#### Product Diagram

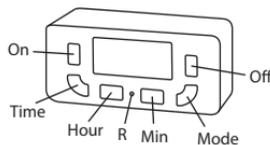

#### Initial Setup

1. Charging the battery: Plug the timer into a regular 125 Volts wall outlet for approximately 10 minutes to charge the memory back-up battery.  
*Note: You can then unplug the timer from the power outlet and comfortably hold it in your hand to program the timer.*
2. Timer reset: Clear any previous data in memory by pressing R button after charging.
3. 12/24 hour mode: The timer by default is 12-hour mode. Press ON and OFF button simultaneously to change to 24-hour mode.
4. Set time: Press and hold TIME button, and then press HOUR and MIN to set current time.

#### To Program

1. Press and hold ON button, and then press the HOUR or MIN to set ON program.
2. Press and hold OFF button, and then press the HOUR or MIN to set OFF program.

#### To Operate

Press MODE button as necessary to display: "ON" – the plugged in device remains ON. "OFF" – the plugged in device remains OFF. "TIME" – the plugged in device follows your programmed timer setting.

#### To Connect the Timer

1. Plug the timer into a wall outlet.
2. Plug a home appliance into the timer, and then turn on the home appliance.

#### Caution

1. Do not plug one timer into another timer.
2. Don't plug in an appliance where the load exceeds 15 Amp.
3. Always ensure the plug of any appliance is fully inserted into the timer outlet.
4. If cleaning of the timer is required, remove the timer from mains power and wipe it with a dry cloth.

5. Do not immerse the timer in water or any other liquid.
6. Heaters and similar appliances should never be left unattended during operation. The manufacturer recommends such appliances not to be connected with timers.

#### FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Limited Lifetime Warranty

Visit [fosmon.com/warranty](http://fosmon.com/warranty) for Product Registration, warranty and limited liability details.

#### Recycling the Product

To dispose this product properly, please follow the recycling process regulated in your area.

#### Follow Us On Social Media



[www.fosmon.com](http://www.fosmon.com)  
[support@fosmon.com](mailto:support@fosmon.com)  
© 2019 Fosmon Inc. All rights reserved.