

C-10779US User Manual

Size 4.5 in. (H) x 8.25 in. (L)



DO NOT RETURN THE PRODUCT

There are good days and there are bad days.  
It is our BAD if the product is not working,  
or if you are not happy with it.

PLEASE GIVE US A CHANCE and  
WE WILL MAKE IT RIGHT

Contact us:  
Toll Free: 1-833-3-FOSMON (833-336-7666)  
Direct: (612) 435-7508  
Email: support@fosmon.com



Fosmon [ETL Listed] 125V/15A  
Wireless Remote Control Outlet  
Switch - White (5 US Outlets + 2  
Remote Controls)

User Manual  
Go to Fosmon.com for Warranty and User Manual

Thank you for purchasing this Fosmon product. For optimum performance and safety, please read this user manual carefully before operating and keep it for future reference.

Fosmon's Indoor wireless outlet plugs will allow you to turn on/off indoor light fixtures and electrical appliances with a remote control. A remote is able to control up to five plugs independently with on and off buttons.


Package Includes

- 5x Wireless Outlet Plugs
- 2x Remote Controls
- 4x AAA Batteries
- 1x User Manual

Specification

Voltage	125VAC 60Hz
Maximum Load	15A 1875W Resistive or General Purpose 10A 1250W Tungsten ½ HP, TV-5
Remote Battery	2PCs AAA 1.5V
Radio Frequency	433.92 MHz
Transmitter Duty Cycle	<10%
Receiver Category	Class 3
Operation Distance	about 80ft in an open area

Diagram

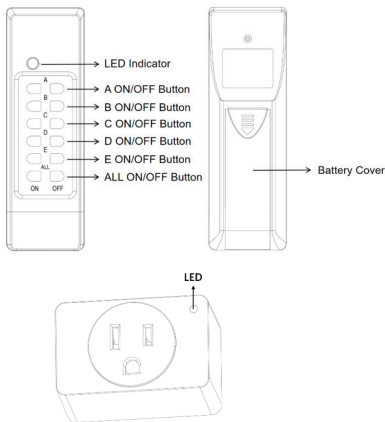

Operations

- Put batteries in the transmitter
- Open the battery cover of the transmitter, and put two pieces of AAA 1.5V batteries in it.
  - Press any remote button to see if the LED indicator turns on. If it turns on, the remote is functioning.

2. Pair the remote with the plugs

- Plug the receiver (plug) into a 3-prong AC outlet. The receiver's LED indicator will flash slowly, indicating that the receiver is in pairing mode.
- While the LED indicator on the receiver is flashing slowly, press the ON button of a selected channel. The receiver will exit pairing mode after either paired or 29 seconds.
- Now you can turn on/off the receiver by pressing the remote buttons.
- Repeat the same steps above to pair the other receivers (plugs) to different channels.

3. Unpair the remote with the plug

- Unplug the receiver and plug it back in again. The LED indicator will flash slowly, indicating that it is in pairing mode.
- Press the OFF button of the plug's corresponding channel. The receiver's LED will flash quickly for 3-4 seconds. After that, the receiver will return back to pairing mode.
- Wait until the LED stopping flashing, or unplug the receiver.
- The receiver should now be unpaired with the remote.

4. Reset the plug

- Unplug the receiver and plug it back in again. The LED indicator will flash slowly, indicating that it's in pairing mode.
- Press the OFF button of the ALL channel. The receiver's LED will flash quickly for 3-4 seconds.
- The receiver should now be unpaired with all remotes.

Helpful Tips

- The transmitted coded pattern is random/learning code. The repeat probability is 1/1,048,575.
- The remote can control up to 5 ON/OFF channels. Each channel can control one certain receiver. If one channel is paired with multiple receivers, this channel can turn them on/off simultaneously.
- ALL channel can control all 5 channels simultaneously.
- One receiver can memorize the maximum of 10 channels. If the eleventh channel is paired, the first channel will be unpaired.

WARNINGS

- Risk of Electric Shock
- Keep children away.
  - Do not use in wet locations.
  - Do not plug two or more receivers together.
  - Always ensure the plug of any appliance is fully inserted into the receiver's outlet.
  - If cleaning of the receiver is required, remove it from mains power and wipe it with a dry cloth.
  - Do not immerse the device in water or any other liquid.
  - For indoor use only.
- Risk of Fire
- Don't plug in an appliance where the load exceeds rated capacity.
  - Do not use with extension cords.
  - Do not use to control appliances that contain heating elements (cooking appliances, heaters, irons, etc.)

Caution

- Do not install/operate this product unless it could be wired with minimum 15Amp circuit breaker.
- Suggestion: Do not plug the device into RCS-13U directly, please using circuit breaker between these two.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received,

including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Follow Us On Social Media



www.fosmon.com  
support@fosmon.com  
© 2021 Fosmon Inc. All rights reserved.

Limited Lifetime Warranty

Visit fosmon.com/warranty for Product Registration, warranty and limited liability details.

Recycling the Product

To dispose this product properly, please follow the recycling process regulated in your area.